

# 7 Parts and diagrams

This chapter provides an exploded view that shows the replaceable parts of the printer, tables of replaceable parts, and links to other resources.

- [Ordering parts and supplies](#)
- [Accessories and consumables](#)
- [Printer exchange/parts](#)
- [Major components](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

# Accessories and consumables


## Accessories

**Table 7-2** Accessories

Product name	Description	Product number	Part number	Exchange number
Replacement print cartridge	2,000–page cartridge	N/A	Q2612A	
Cables and interface accessories	3-meter IEEE-1284 parallel cable	N/A	C2951A	
Cables and interface accessories	1.8-meter (6-foot) USB cable	NA	8120-8485	
Cables and interface accessories	.6-meter (2-foot) USB cable	Q2460A	8121-0712	
Cables and interface accessories	Power cord, US/Canada	NA	8120-6812	
Cables and interface accessories	Power cord, Europe	N/A	8120-6811	
Cables and interface accessories	Power cord, Switzerland	N/A	8120-6815	
Cables and interface accessories	Power cord, UK	N/A	8120-6809	
Cables and interface accessories	Power cord, Danish	N/A	8120-6814	
Cables and interface accessories	Power cord, SA	N/A	8120-6813	
Cables and interface accessories	Power cord, Israel	N/A	8120-6800	
Toner cloth	Ideal for wiping up toner spills and cleaning the printer	N/A	5090-3379	
CD ROM		N/A	CB419-60101	
CD-Service and Support Training		N/A	Q2460-60106	
Service Manual, HP LJ 1018 printer		N/A	CB419-90938	

<sup>1</sup> (NOTE: If two parts are listed for one country/region, you can use either part regardless of the output rating.)

## Printer exchange/parts

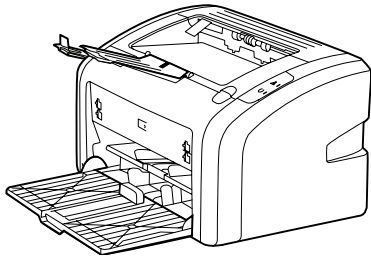


**Figure 7-1** HP LJ 1018 product

laser.nik.ru

**Table 7-3** Printer exchange/parts

Ref	Description	Part number	Qty
	HP LJ 1018-110V printer (replacement)	CB419-60056	1
	HP LJ 1018-110V printer (exchange engine with formatter)	CB419-69056	1
	HP LJ 1018-110V printer (exchange engine without formatter)	CB419-67001	1
	HP LJ 1018-220V printer (replacement)	CB419-60055	1
	HP LJ 1018-220V printer (exchange engine with formatter)	CB419-69055	1
	HP LJ 1018-220V printer (exchange engine without formatter)	CB419-67002	1
not shown	HP LJ 1018 formatter	CB440-60001	1
not shown	Nameplate HP LJ	CB419-00002	1

## Major components

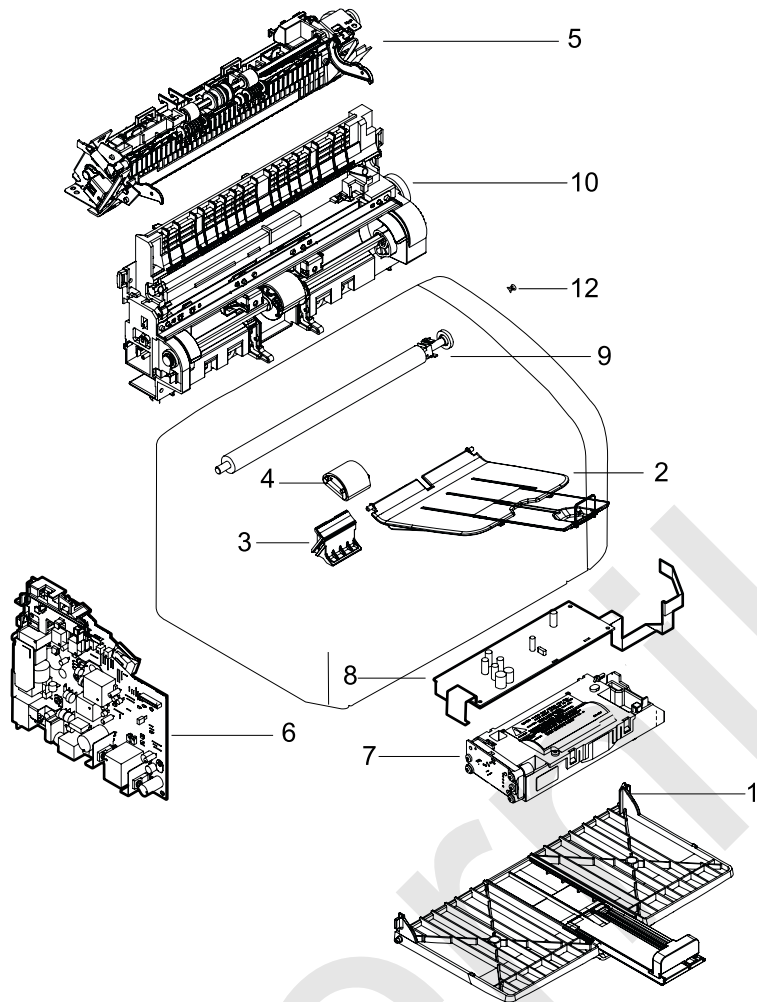

**Figure 7-2** Major components (HP LJ 1010 series shown)

**Table 7-4** Major components

<b>Ref</b>	<b>Description</b>	<b>Part number</b>	<b>Qty</b>
1	Paper pickup tray assembly	RM1-2079-000CN	1
2	Delivery tray assembly	RM1-0659-000CN	1
3	Separation pad assembly	RM1-0648-000CN	1
4	Roller, pickup	RL1-0266-000CN	1
5	Fuser (fixing assembly) 110V to 127V	RM1-2086-000CN	1
5	Fuser (fixing assembly) 220V to 240V	RM1-2087-000CN	1
6	Engine power supply 110V to 127V	RM1-2315-000CN	1
6	Engine power supply 220V to 240V	RM1-2316-000CN	1
7	Laser/scanner assembly	RM1-2084-000CN	1
8	Engine control assembly	RM1-2314-000CN	1
9	Transfer roller assembly	RM1-2093-000CN	1
10	Paper pickup assembly	RM1-2091-000CN	1
12	Door Link Clip (Stopper)	RM1-1957-000CN	1

# Alphabetical parts list

**Table 7-5** Alphabetical parts list

Description	Part number	Table and page
Delivery tray assembly	RM1-0659-000CN	<a href="#">Major components on page 123</a>
Door Link Clip (Stopper)	RM1-1957-000CN	<a href="#">Major components on page 123</a>
Engine control assembly	RM1-2314-000CN	<a href="#">Major components on page 123</a>
Engine power supply 110V to 127V	RM1-2315-000CN	<a href="#">Major components on page 123</a>
Engine power supply 220V to 240V	RM1-2316-000CN	<a href="#">Major components on page 123</a>
Fuser (fixing assembly) 110V to 127V	RM1-2086-000CN	<a href="#">Major components on page 123</a>
Fuser (fixing assembly) 220V to 240V	RM1-2087-000CN	<a href="#">Major components on page 123</a>
HP LJ 1018-110V printer (exchange engine with formatter)	CB419-69056	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018-110V printer (replacement)	CB419-60056	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018-220V printer (exchange engine with formatter)	CB419-69055	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018-220V printer (replacement)	CB419-60055	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018-110V printer (exchange engine without formatter)	CB419-67001	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018-220V printer (exchange engine without formatter)	CB419-67002	<a href="#">Printer exchange/parts on page 120</a>
HP LJ 1018 formatter	CB440-60001	<a href="#">Printer exchange/parts on page 120</a>
Laser/scanner assembly	RM1-2084-000CN	<a href="#">Major components on page 123</a>
Nameplate HP LJ	CB419-00002	<a href="#">Printer exchange/parts on page 120</a>
Paper pickup assembly	RM1-2091-000CN	<a href="#">Major components on page 123</a>
Paper pickup tray assembly	RM1-2079-000CN	<a href="#">Major components on page 123</a>
Roller, pickup	RL1-0266-000CN	<a href="#">Major components on page 123</a>

**Table 7-5** Alphabetical parts list (continued)

Description	Part number	Table and page
Separation pad assembly	RM1-0648-000CN	<a href="#">Major components on page 123</a>
Transfer roller assembly	RM1-2093-000CN	<a href="#">Major components on page 123</a>

laser.nik.ru



# Numerical parts list

**Table 7-6** Numerical parts list

Part number	Description	Table and page
CB419-60055	HP LJ 1018-220V printer (replacement)	<a href="#">Printer exchange/parts on page 120</a>
CB419-60056	HP LJ 1018-110V printer (replacement)	<a href="#">Printer exchange/parts on page 120</a>
CB419-69055	HP LJ 1018-220V printer (exchange engine with formatter)	<a href="#">Printer exchange/parts on page 120</a>
CB419-69056	HP LJ 1018-110V printer (exchange engine with formatter)	<a href="#">Printer exchange/parts on page 120</a>
CB419-00002	Nameplate HP LJ	<a href="#">Printer exchange/parts on page 120</a>
CB419-67001	HP LJ 1018-110V printer (exchange engine without formatter)	<a href="#">Printer exchange/parts on page 120</a>
CB419-67002	HP LJ 1018-220V printer (exchange engine without formatter)	<a href="#">Printer exchange/parts on page 120</a>
CB440-60001	HP LJ 1018 formatter	<a href="#">Printer exchange/parts on page 120</a>
RL1-0266-000CN	Roller, pickup	<a href="#">Major components on page 123</a>
RM1-0648-000CN	Separation pad assembly	<a href="#">Major components on page 123</a>
RM1-0659-000CN	Delivery tray assembly	<a href="#">Major components on page 123</a>
RM1-2079-000CN	Paper pickup tray assembly	<a href="#">Major components on page 123</a>
RM1-2084-000CN	Laser/scanner assembly	<a href="#">Major components on page 123</a>
RM1-2086-000CN	Fuser (fixing assembly) 110V to 127V	<a href="#">Major components on page 123</a>
RM1-2087-000CN	Fuser (fixing assembly) 220V to 240V	<a href="#">Major components on page 123</a>
RM1-2091-000CN	Paper pickup assembly	<a href="#">Major components on page 123</a>
RM1-2093-000CN	Transfer roller assembly	<a href="#">Major components on page 123</a>
RM1-2314-000CN	Engine control assembly	<a href="#">Major components on page 123</a>
RM1-2315-000CN	Engine power supply 110V to 127V	<a href="#">Major components on page 123</a>

**Table 7-6** Numerical parts list (continued)

<b>Part number</b>	<b>Description</b>	<b>Table and page</b>
RM1-2316-000CN	Engine power supply 220V to 240V	<a href="#">Major components on page 123</a>
RM1-1957-000CN	Door Link Clip (Stopper)	<a href="#">Major components on page 123</a>

laserernik.ru